

# SHIMANO

## CURADO S A-RB




### CU-200IPG

[CLICK HERE](#) For Bearing Kits in Stainless Steel and Ceramic

OR

Click on the circled bearings to see options for each

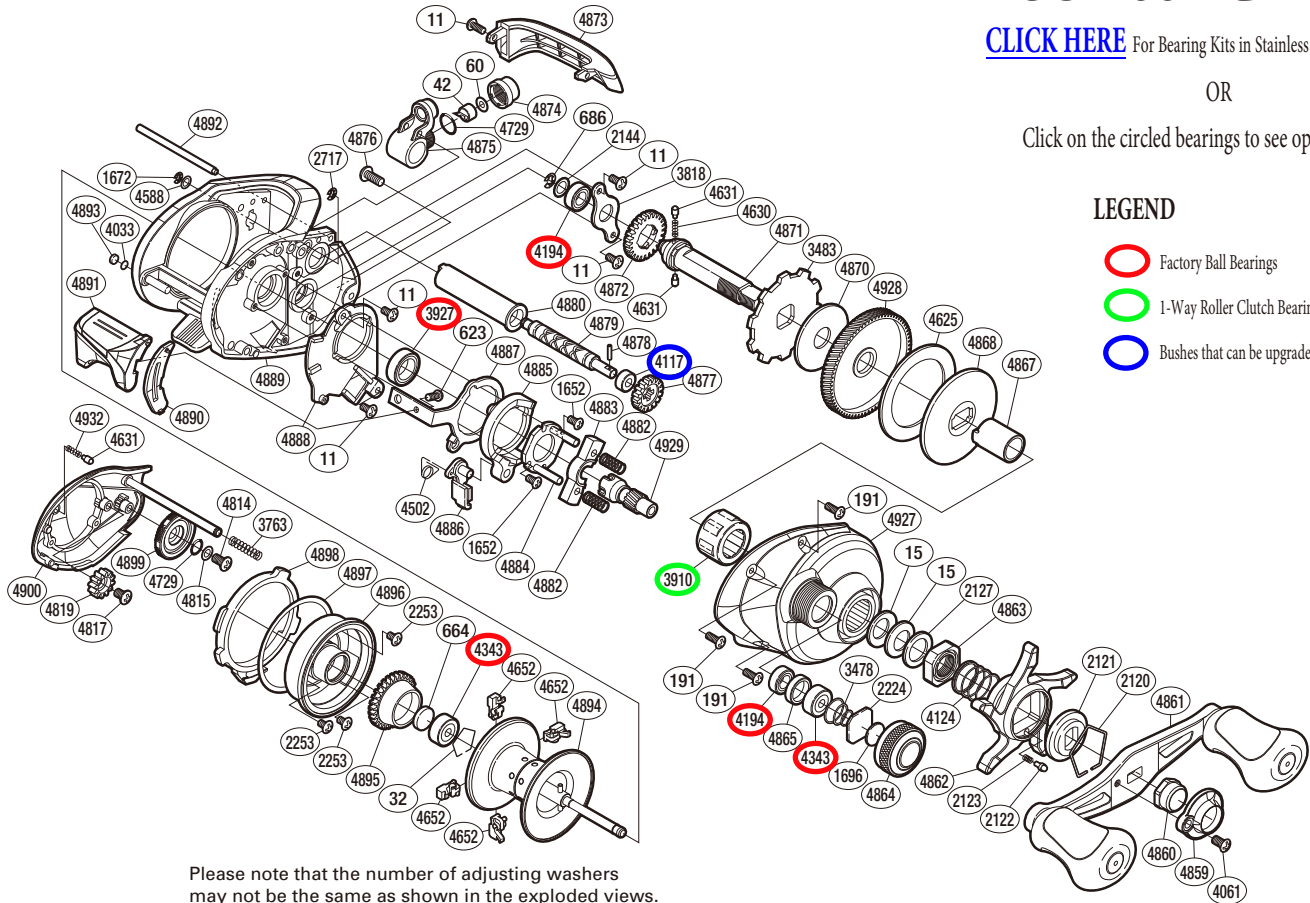

#### LEGEND

- Factory Ball Bearings
- 1-Way Roller Clutch Bearing
- Bushes that can be upgraded

Please note that the number of adjusting washers may not be the same as shown in the exploded views. (Adjustment will vary with each individual product.)

(51RH39H200U)

Part No.	Description	BNT No.	Description	BNT No.	Description
BNT0011	Screw	BNT4124	Star Drag Spring	BNT4877	Idle Gear
BNT0015	Drag Spring Washer	BNT4194	Ball Bearing	BNT4878	Worm Shaft Pin
BNT0032	Bearing Retainer	BNT4343	Ball Bearing	BNT4879	Worm Shaft
BNT0042	Line Guide Pawl	BNT4502	Clutch Pawl Spring	BNT4880	Level Wind Guard
BNT0060	Spacer	BNT4588	Washer	BNT4882	Yoke Spring
BNT0191	Screw	BNT4625	Drag Washer	BNT4883	Yoke
BNT0623	Screw	BNT4630	Idle Gear Spring	BNT4884	Clutch Cam Retainer
BNT0664	Spacer B	BNT4631	Idle Gear Pin	BNT4885	Clutch Cam
BNT0686	E Lock	BNT4652	Brake Shoe	BNT4886	Clutch Pawl
BNT1652	Screw	BNT4729	O Ring	BNT4887	Clutch Plate
BNT1672	E Lock	BNT4814	Screw	BNT4888	Clutch Guard
BNT1696	Cast Control Spacer	BNT4815	Washer	BNT4889	One-Piece Frame
BNT2120	Click Plate Retainer	BNT4817	Screw	BNT4890	Clutch Bar Guide
BNT2121	Star Drag Click Plate	BNT4819	Idle Gear	BNT4891	Quick-Fire II Clutch Bar
BNT2122	Click Pin	BNT4859	Handle Nut Plate	BNT4892	Stabilizer Bar
BNT2123	Click Spring	BNT4860	Handle Nut	BNT4893	Anti-Thrust Washer
BNT2127	Star Drag Spacer	BNT4861	Handle Assembly	BNT4894	Spool Assembly
BNT2144	Washer	BNT4862	Star Drag	BNT4895	Brake Ring Gear
BNT2224	Spool Tension Spacer	BNT4863	Star Drag Nut	BNT4896	Brake Case
BNT2253	Screw	BNT4864	Cast Control Cap	BNT4897	Washer
BNT2717	E Lock	BNT4865	Bearing Spacer	BNT4898	Side Plate Cam Lever
BNT3478	Spool Tension Spring	BNT4867	Roller Clutch Inner Tube	BNT4899	Brake Dial
BNT3483	Anti-Reverse Ratchet	BNT4868	Key Washer	BNT4900	Left Side Plate
BNT3763	Side Plate Spring	BNT4870	Drag Washer	BNT4927	Right Side Plate
BNT3818	Drive Shaft Retainer	BNT4871	Drive Shaft	BNT4928	Drive Gear
BNT3910	Roller Clutch Bearing	BNT4872	Idle Gear	BNT4929	Pinion Gear
BNT3927	Ball Bearing	BNT4873	Level Wind Protector	BNT4932	Click Spring
BNT4033	Washer	BNT4874	Pawl Cap		
BNT4061	Screw	BNT4875	Line Guide		
BNT4117	Bushing	BNT4876	Screw	BNT4692	B-100 Oil (accessory)

(140408)